A B C D E F G

1 2 3 4 5

SCHEMATIC DIAGRAM

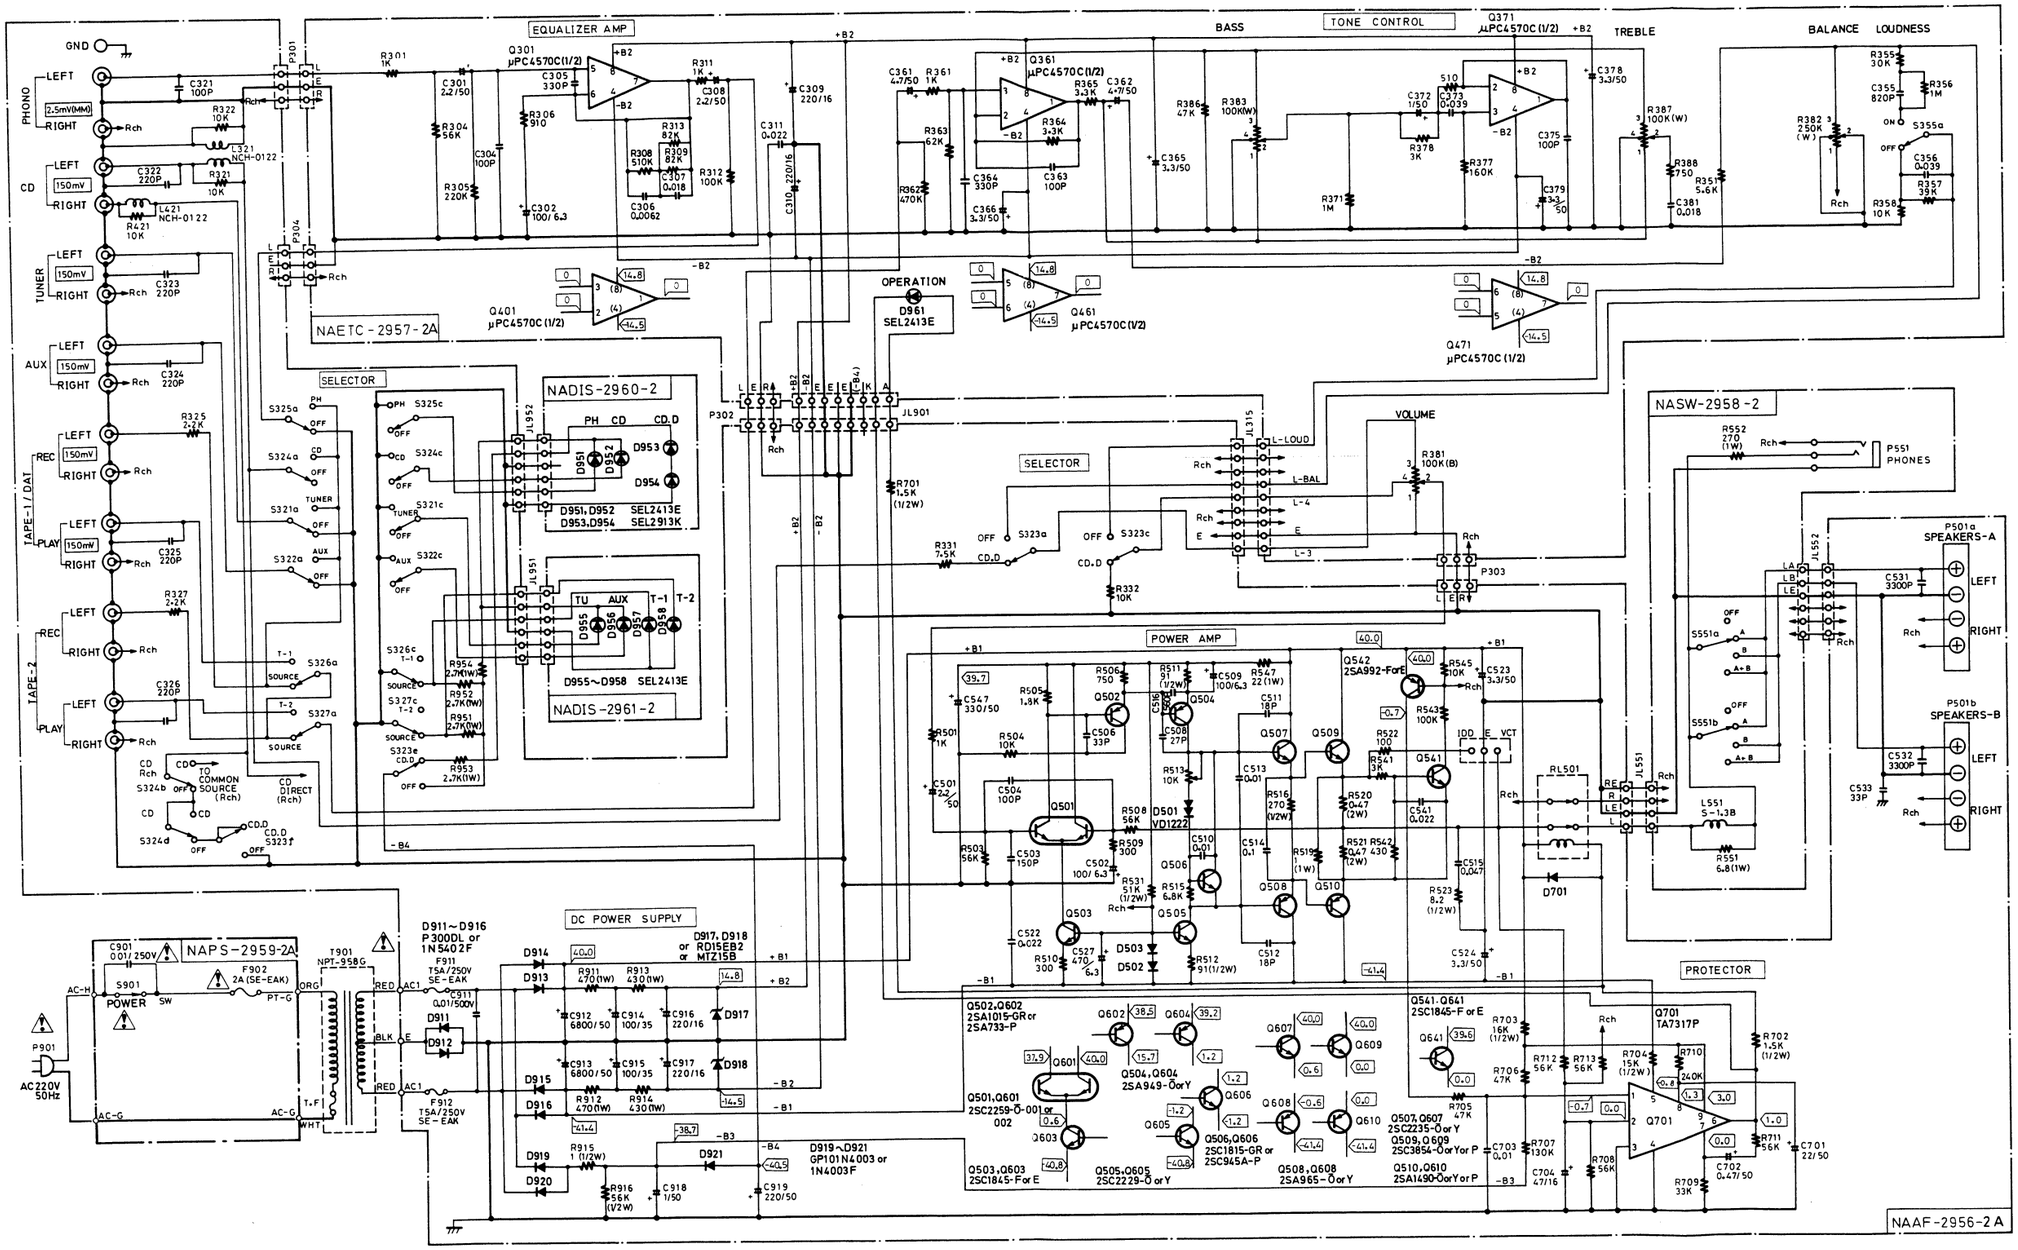

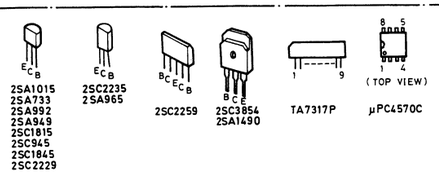

NO	FUNCTION	POSITION
S901	POWER	OFF ON
S321 ~ S325	SELECTOR	CD.D CD PHONO TUNER AUX
S326	MONITOR	SOURCE TAPE-1/DAT
S327	MONITOR	SOURCE TAPE-2
S551	SPEAKERS	OFF A B A+B
S352	LOUDNESS	OFF ON

NOTES

- THE COMPONENTS IDENTIFIED BY MARK ⚠ ARE CRITICAL FOR SAFETY. REPLACE ONLY WITH PART NUMBER SPECIFIED.
- VOLTAGE (MEASURED WITH V.T.V.M.) ⟨ ⟩ V IS DC VOLTAGE.(NO INPUT SIGNAL)
- ELECTROLYTIC CAPACITORS (⊕⊖) ARE IN μF/WV.
- ALL CAPACITORS ARE IN μF/50WV UNLESS OTHERWISE NOTED.
- ALL RESISTORS ARE IN OHMS 1/4 WATTS UNLESS OTHERWISE NOTED.
- ALL DIODES ARE IS2473, 1S2076, US1040 or 1SS133 UNLESS OTHERWISE NOTED.
- CIRCUIT IS SUBJECT TO CHANGE FOR IMPROVEMENT.

ONKYO CORPORATION